

ISO 9001
ISO14001



Manufacturer

TLV CO., LTD.

Kakogawa, Japan

is approved by LRQA Ltd. to ISO 9001:2001



Instruction Manual

Electro-Pneumatic Control Valve with Built-in Separator and Steam Trap
CV-COS-16 (for Valve Unit)

172-65727M-04

Publication date 17 January 2024

Copyright © 2024 TLV CO., LTD.

Table of Contents

Introduction	3
Safety Considerations	4
Specifications	6
Configuration	7
Installation	9
Maintenance	12
Disassembly/Reassembly	14
Troubleshooting	22
TLV EXPRESS LIMITED WARRANTY	24
Service	26
Options	27

Introduction

Thank you for purchasing the TLV electro-pneumatic control valve with built-in separator and steam trap.

This product has been thoroughly inspected before being shipped from the factory. When the product is delivered, before doing anything else, check the specifications and external appearance to make sure nothing is out of the ordinary. Also be sure to read this manual carefully before use and follow the instructions to be sure of using the product properly.

The TLV pneumatic control valve with built-in separator and steam trap is a revolutionary product that combines an integrated positioner/diaphragm-type actuator with a separator and a steam trap. Steam-using equipment can achieve its intended efficiency only if the steam being used is very dry. Using steam in which matter such as condensate, scale or types of grease is entrained can not only result in problems with the steam-using equipment and in lowered productivity, but can also lead to shortened service life for and malfunction of the control valve. This product is a new control valve that offers a solution for these problems by supplying high-quality steam to the process and offering maximum productivity.

If detailed instructions for special order specifications or options not contained in this manual are required, please contact TLV for full details.

This instruction manual is intended for use with the model(s) listed on the front cover. It is needed not only for installation, but also for subsequent maintenance, disassembly/reassembly and troubleshooting. Please keep it in a safe place for future reference.

Safety Considerations

- Read this section carefully before use and be sure to follow the instructions.
- Installation, inspection, maintenance, repairs, disassembly, adjustment and valve opening/closing should be carried out only by trained maintenance personnel.
- The precautions listed in this manual are designed to ensure safety and prevent equipment damage and personal injury. For situations that may occur as a result of erroneous handling, three different types of cautionary items are used to indicate the degree of urgency and the scale of potential damage and danger: DANGER, WARNING and CAUTION.
- The three types of cautionary items above are very important for safety: be sure to observe all of them as they relate to installation, use, maintenance and repair. Furthermore, TLV accepts no responsibility for any accidents or damage occurring as a result of failure to observe these precautions.

Cautionary items and definitions



Danger

Indicates an urgent situation which poses a threat of death or serious injury



Warning

Indicates that there is a potential threat of death or serious injury



Caution

Indicates that there is a possibility of injury or equipment/product damage

Safety considerations for the product



Warning

NEVER apply direct heat to the float. The float may explode due to increased internal pressure, causing accidents leading to serious injury or damage to property and equipment.



Caution

Install properly and DO NOT use this product outside the recommended operating pressure, temperature and other specification ranges. Improper use may result in such hazards as damage to the product or malfunctions that may lead to serious accidents. Local regulations may restrict the use of this product to below the conditions quoted.



Caution

DO NOT use the product in excess of the maximum operating pressure differential. Such use could make discharge through the steam trap impossible (blocked).



Caution

Use hoisting equipment for heavy objects (weighing approximately 20 kg (44 lb) or more). Failure to do so may result in back strain or other injury if the object should fall.



Caution

Take measures to prevent people from coming into direct contact with product outlets. Failure to do so may result in burns or other injury from the discharge of fluids.



Caution

When disassembling or removing the product, wait until the internal pressure equals atmospheric pressure and the surface of the product has cooled to room temperature. Disassembling or removing the product when it is hot or under pressure may lead to discharge of fluids, causing burns, other injuries or damage.

**Caution**

Be sure to use only the recommended components when repairing the product, and NEVER attempt to modify the product in any way. Failure to observe these precautions may result in damage to the product and burns or other injury due to malfunction or the discharge of fluids.

**Caution**

Do not use excessive force when connecting threaded pipes to the product. Over-tightening may cause breakage leading to fluid discharge, which may cause burns or other injury.

**Caution**

Use only under conditions in which no freeze-up will occur. Freezing may damage the product, leading to fluid discharge, which may cause burns or other injury.

**Caution**

Use only under conditions in which no water hammer will occur. The impact of water hammer may damage the product, leading to fluid discharge, which may cause burns or other injury.

**Caution**

Make sure the power supply switch is OFF before carrying out work on the wiring or inspections involving disassembly. If such work is carried out with the power on, there is a danger that equipment may malfunction or electric shock may occur, leading to injury or other accidents.

**Caution**

Make sure that wiring work requiring a special license is carried out only by qualified personnel. If carried out by unqualified personnel, overheating or short circuits leading to injury, fires, damage or other accidents may occur.

**Caution**

When using this product, NEVER stand close to, or leave tools anywhere near moving parts such as the shaft. Contact with moving parts or objects becoming caught in moving parts could lead to injury, damage or other accidents.

Specifications




Caution
Install properly and DO NOT use this product outside the recommended operating pressure, temperature and other specification ranges. Improper use may result in such hazards as damage to the product or malfunctions that may lead to serious accidents. Local regulations may restrict the use of this product to below the conditions quoted.

DO NOT use the product in excess of the maximum operating pressure differential. Such use could make discharge through the steam trap impossible (blocked).

Use only under conditions in which no freeze-up will occur. Freezing may damage the product, leading to fluid discharge, which may cause burns or other injury.

Refer to the product nameplate ¹ for detailed specifications.

Valve section

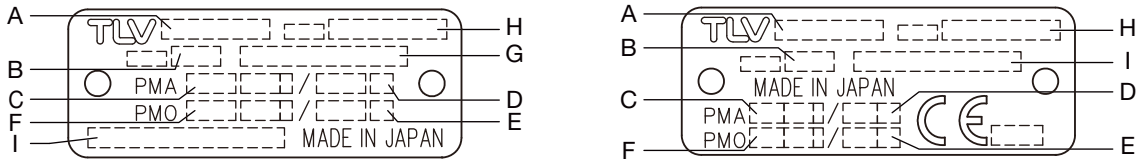


A	Model	F	Maximum Operating Pressure (PMO)
B	Nominal Diameter	G	Operating direction
C	Maximum Allowable Pressure (PMA) ⁰¹	H	Production Lot No.
D	Maximum Allowable Temperature (TMA) ⁰¹	I	Valve No. ⁰²
E	Maximum Operating Temperature (TMO)		

⁰¹Maximum allowable pressure (PMA) and maximum allowable temperature (TMA) are PRESSURE SHELL DESIGN CONDITIONS, **NOT** OPERATING CONDITIONS.

⁰²Valve No. is displayed for products with options. This item is omitted from the nameplate when there are no options.



Actuator Section

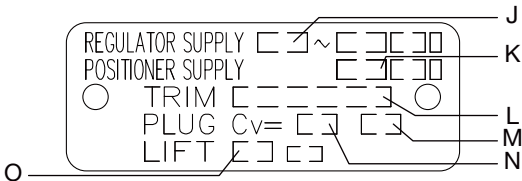

J	Spring range	M	Valve characteristic
K	Pressure supplied to Positioner	N	Cv value
L	Valve material	O	Stroke

¹Nameplate layout depends on product specifications.

Configuration

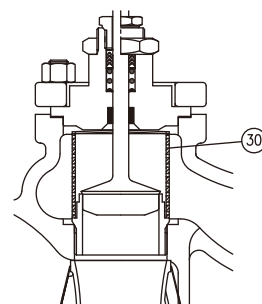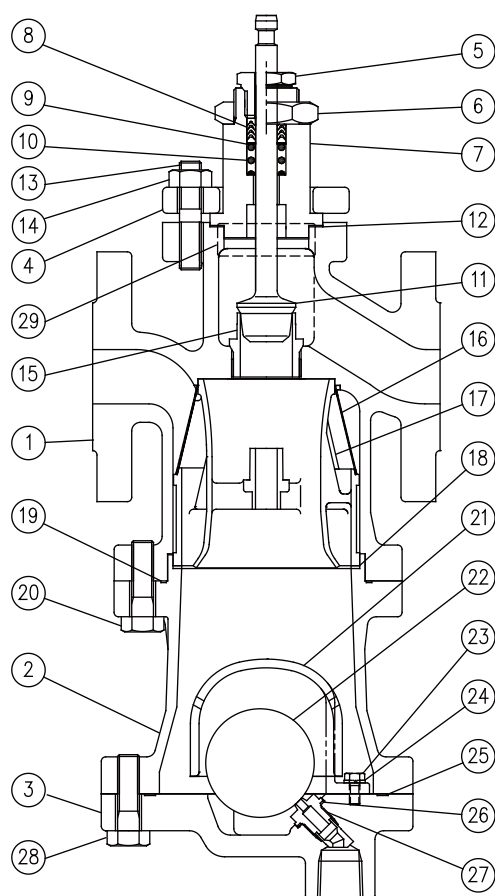

Sizes 40 and 50 mm

No.	Part Name	A ⁰¹	B ⁰¹	C ⁰¹	D ⁰¹
1	Main Body				
2	Separator Body				
3	Trap Cover				
4	Flange				
5	Guide Bushing				
6	Valve Bonnet Nut				
7	Valve Bonnet				
8	Stuffing Box V-ring Packing		✓		
9	Stuffing Box Washer		✓		
10	Stuffing Box Spring		✓		
11	Valve Plug & Stem		✓		
12	Valve Bonnet Gasket	✓	✓		
13	Bolt				
14	Nut				
15	Main Valve Seat		✓		
16	Separator Screen				
17	Separator				
18	Wave Spring				
19	Valve Seat Gasket	✓	✓		
20	Separator Body Bolt				
21	Float Cover				

No.	Part Name	A ⁰¹	B ⁰¹	C ⁰¹	D ⁰¹
22	Float				✓
23	Float Cover Bolt				
24	Spring Washer				
25	Trap Cover Gasket	✓	✓		
26	Trap Valve Seat Gasket	✓		✓	
27	Trap Valve Seat			✓	
28	Trap Cover Bolt				
29	Nameplate				
30	Silencer				

⁰¹Replacement parts are available only in the available kiTrap Valve Seat: A=Maintenance kit, B=Repair kit, C=Repair kit for Trap Valve Seat, D=Float

Installation



Caution

Install properly and DO NOT use this product outside the recommended operating pressure, temperature and other specification ranges. Improper use may result in such hazards as damage to the product or malfunctions that may lead to serious accidents. Local regulations may restrict the use of this product to below the conditions quoted.

Take measures to prevent people from coming into direct contact with product outlets. Failure to do so may result in burns or other injury from the discharge of fluids.

Do not use excessive force when connecting threaded pipes to the product. Over-tightening may cause breakage leading to fluid discharge, which may cause burns or other injury.

Installation, inspection, maintenance, repairs, disassembly, adjustment and valve opening/closing should be carried out only by trained maintenance personnel.


Check to make sure that the piping where the product is to be installed is constructed properly. If the piping is not correctly constructed, the valve may not perform optimally.

1. Blowdown

Blowdown is especially important for newly installed piping or after the system has been shut down for a long period of time. This will reduce operation failure caused by condensate or foreign matter.

2. Removing protective caps and seals

Before installation, be sure to remove all protective seals and caps. (Found in 3 locations, on the product inlet and outlet(s).)

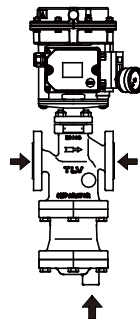


3. Installation angle

Install the product vertically, so that the arrow mark on the body points horizontally in the direction of flow. Allowable inclination is 10 degrees in the fore-aft direction and 15 degrees in the plane perpendicular to the flow line.


When the product is used with the drain plug, there are no installation restrictions.

When the drain plug is removed from the product and the blow valve or steam/air trap installed, install the product so that the actuator section is perpendicular (directly above) the horizontal piping.

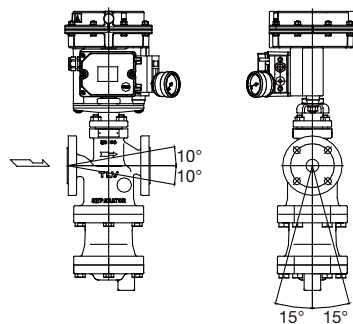


4. Piping support

Install the product, paying attention to avoid excessive load, bending and vibration. Support the inlet and outlet pipes securely.

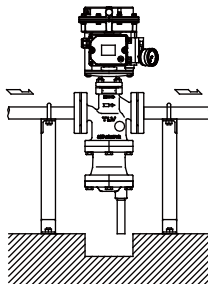

5. Maintenance space


Leave sufficient space for maintenance, inspection and repair.

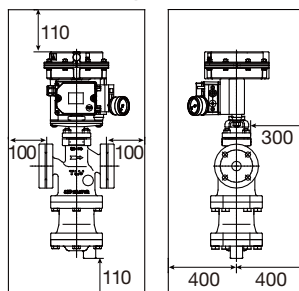

6. Trap outlet pipe

For ease of maintenance, installation of a union connection is recommended for the trap outlet pipe.

Connect the outlet pipe to a condensate return line, or extend it to a trench. In the case of the latter, make sure the end of the pipe is above the waterline. (Dirt and water may be sucked up by the vacuum formed during trap closure and system shutdown.)

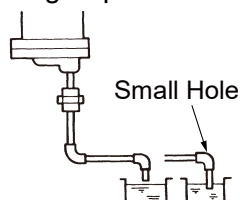

7. Accessories

Always install a shut-off valve, pressure gauge and bypass line at both inlet and outlet. Ball valves, which will not retain condensate, are recommended for inlet and outlet shut-off valves. The bypass pipe should be at least $\frac{1}{2}$ of the size of the inlet (primary side) pipe.

8. Installation environment


Check the installation environment to make sure that the ambient temperature does not exceed the actuator ambient temperature limit and that no corrosive gasses are present.

9. Installing a shut-off valve

Though a product adequately performs the function of a shut-off valve initially, extended use will result in a drop in its performance as an isolation valve. Be sure to install a separate shut-off or automatic valve if complete isolation is needed.

10. Installing a safety valve

When installing a safety valve, be sure not to install it between the control valve and the shut-off valve. A safety valve must be installed near the equipment it is to protect, on the outlet side of the shut-off valve.

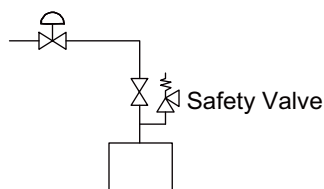

11. Preventing foreign matter and water hammer

Do not install in locations in the piping where foreign matter accumulates or where impact from water pressure (water hammer) occurs.

12. Gaskets for piping

Be careful that the piping gaskets do not protrude outside the inner bore of the flange. The type of medium being used and the temperature must be taken into account in order to select a gasket of a suitable material.

13. Air line blowdown/purge

Before connecting the air lines for the motive air that is to be piped to the actuator, blow out the air in the lines to purge any dirt, foreign matter, oil or water from inside of the piping.

14. Quality of motive air

Supply to the actuator only clean air that does not contain water, oil or foreign matter. To prevent malfunction due to contamination of the air supply, installation of the optional air filter regulator (5 μ filter) and mist separator (0.3 μ filter) as a set is recommended. If air quality results in operation failure, the entire actuator unit (including the integrated positioner) must be replaced.

If there is a problem in operation, determine the cause using the "Troubleshooting" section in this manual.

Maintenance



Caution

Take measures to prevent people from coming into direct contact with product outlets.

Failure to do so may result in burns or other injury from the discharge of fluids.

When disassembling or removing the product, wait until the internal pressure equals atmospheric pressure and the surface of the product has cooled to room temperature.

Disassembling or removing the product when it is hot or under pressure may lead to discharge of fluids, causing burns, other injuries or damage.

Be sure to use only the recommended components when repairing the product, and NEVER attempt to modify the product in any way. Failure to observe these precautions may result in damage to the product and burns or other injury due to malfunction or the discharge of fluids.

Operational Check

A visual inspection of the following items should be done on a daily basis to determine whether the product is operating properly or has failed. Periodically (at least biannually) the operation should also be checked. In the event of failure (malfunction), also refer to the "Troubleshooting" section for remedies.

Inspection Item	Inspection Method	Remedy
Leakage from valve (when valve is closed)	Visual Inspection or Stethoscope Inspection: Is the outlet side pressure or temperature elevated, or is there the sound of the medium flowing?	Adjust the zero/span; if that does not solve the problem, replace with a new valve plug & stem and valve seat
Leakage from gland area	Visual Inspection: Is liquid leaking from the slit between the gland and the valve stem?	Coat the gland and the valve stem thoroughly with grease; thoroughly grease the V-ring slot; or replace with a new V-ring
Leakage from the gaskets between any pressurized parts	Visual inspection: Is fluid leaking from the gasket areas on pressurized parts?	Apply additional tightening (refer to recommended torque) or replace with new gaskets
Leakage from pressure-bearing parts such as body and bonnet	Visual Inspection: Is fluid leaking from the body or bonnet?	Replace any pressurized parts at leak locations
Leakage from the trap area	Visual inspection or stethoscope inspection: Is live steam being discharged from the trap outlet piping, or can the sound of a steam leak be heard?	Clean the sealing surface of the trap valve seat or replace the valve seat

Parts Inspection

When parts have been removed, or during periodic inspections, use the following table to inspect the parts and replace any that are found to be defective.

Gaskets: Check for warping or scratches (must be replaced with new gasket when product is disassembled)

Stuffing Box V-ring Packing: Check for warping or damage

Valve Plug & Stem, Valve Seat: Check for damage or scratches

Separator Screen: Check for clogging and corrosion

Trap Valve Seat: Check for scratches, dents, etc.

Float: Check for scratches, dents, etc.

Disassembly/Reassembly



Caution

When disassembling or removing the product, wait until the internal pressure equals atmospheric pressure and the surface of the product has cooled to room temperature. Disassembling or removing the product when it is hot or under pressure may lead to discharge of fluids, causing burns, other injuries or damage.

Be sure to use only the recommended components when repairing the product, and NEVER attempt to modify the product in any way. Failure to observe these precautions may result in damage to the product and burns or other injury due to malfunction or the discharge of fluids.

Use the following procedures to remove components. Use the same procedures in reverse to reassemble. (Installation, inspection, maintenance, repairs, disassembly, adjustment and valve opening/closing should be carried out only by trained maintenance personnel.)

Refer to "Disassembling/Reassembling the Valve and Actuator Sections" on the following page when removing the actuator section. Consult the table of tightening torques when mounting the actuator section on the valve section.




Note

Be sure to coat all threaded portions of the valve seat and bolts with anti-seize.

Removing/Reattaching the Stem Bracket Clamps

Part Name	During Disassembly	During Reassembly
—	Set the actuator air supply pressure to 0 MPaG to maintain the valve in the fully closed position.	Set the actuator air supply pressure to 0 MPaG to maintain the valve in the fully closed position. Check to make sure the valve stem and actuator stem are in firm contact with each other.
Stem Bracket Bolts	Remove with a socket wrench	Consult the table of tightening torques and tighten to the proper torque
Stem Bracket Clamps	Remove the stem bracket clamps	After aligning the clamps, tighten the nuts and bolts while making sure the gap between the clamps is even on both sides

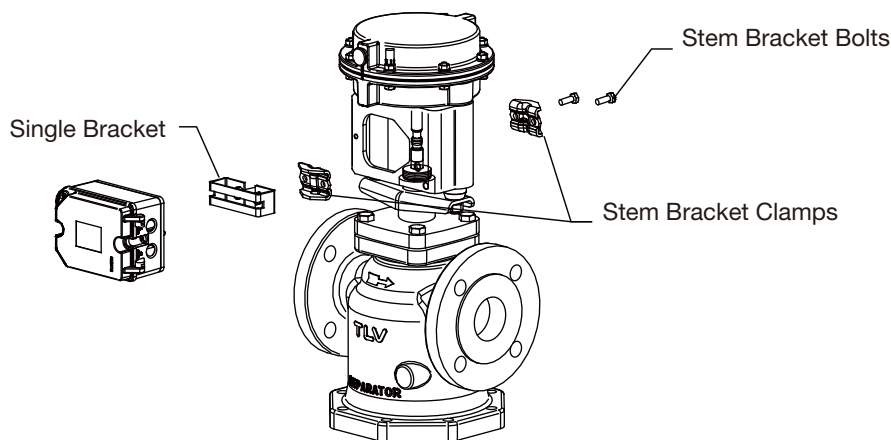

Note

Be careful not to pinch your fingers between the valve stem and actuator stem!

Disassembling/Reassembling the Valve and Actuator Sections

Perform the following procedure before beginning disassembly.

- 1. After connecting the air piping, operate the air pressure reducing valve to maintain the positioner air supply pressure at 0.38 MPaG.
- 2. Connect a current generator or a controller for an operation signal input of 4 to 20 mA.
- 3. Switch the positioner/actuator to manual mode to separate the valve from the actuator. See the instruction manual for the positioner and actuator for details.


Part Name	During Disassembly	During Reassembly
—	Set the operation signal input to 12 mA (50%). Make sure the gap between the valve stem and the actuator stem is open.	Set the operation signal input to 12 mA (50%). Make sure the gap between the valve stem and the actuator stem is open.
Valve Bonnet Nut	Remove with an open-end wrench.	Consult the table of tightening torques and tighten to the proper torque.



Note

Be careful not to pinch your fingers between the valve stem and actuator stem!


Orientation of the actuator unit can be changed.

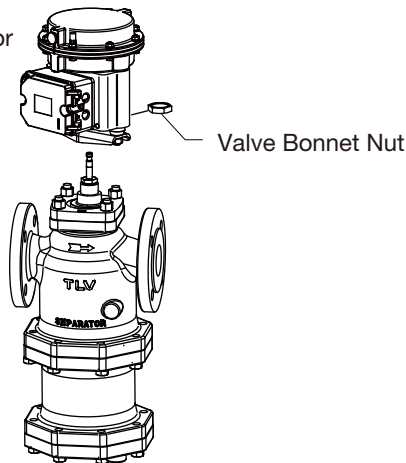

Disassembling/Reassembling the Body Section


Part Name	During Disassembly	During Reassembly
Guide Bushing	Loosen slightly with a socket wrench to make the following procedure easier.	Consult the table of tightening torques and tighten to the proper torque.
Valve Bonnet Nut	Remove with a socket wrench.	Tighten the nuts evenly, while checking to make sure that there is no catching or biting when the valve plug is seated in the valve seat; after tightening to the rated torque, check to make sure that the valve plug & stem moves up and down smoothly; make sure to tighten them evenly.
Flange, Valve Bonnet	Pull up and off, being careful not to damage the valve plug & stem or valve seat.	Reattach, being careful not to damage the valve plug & stem or valve seat. Insert the valve bonnet into the gasket housing securely and without tilting.
Valve Bonnet Gasket	Remove the gasket and clean sealing surfaces.	Replace with a new gasket; do not coat with anti-seize.
Valve Plug & Stem	Pull up and out, being careful not to damage the plug & stem.	Reattach, being careful not to damage the plug & stem.
Silencer ⁰¹	Remove the silencer	Insert the silencer into the hexagonal part of the valve seat.
Valve Seat	15 to 25 mm: Remove with a socket wrench. 40 to 50 mm: Remove with a thin wall socket fitted to a socket wrench or a power wrench; when using a power wrench, refer to its instruction manual.	Overtightening the valve seat may lead to damage the valve seat and/or body. Consult the table of tightening torques and tighten to the proper torque.

⁰¹Standard for Europe, optional for Japan and overseas except Europe

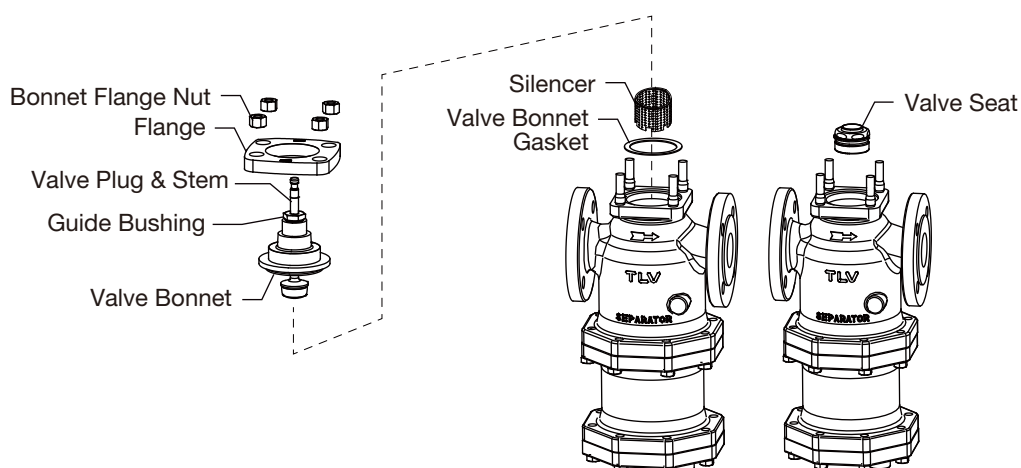



Removing/Reattaching the Separator and its Components

Part Name	During Disassembly	During Reassembly
Bolts for the Main and Trap Body	Remove with a socket wrench. When lifting the main body, be careful not to let the separator fall out.	Consult the table of tightening torques and tighten to the proper torque.
Separator Screen	Remove the separator screen.	Being careful not to bend it, insert it securely onto the slanted part of the separator.
Separator	Remove the separator.	Insert it into the groove in the main body.
Wave Spring	Remove the wave spring.	Insert it into the groove in the trap body.

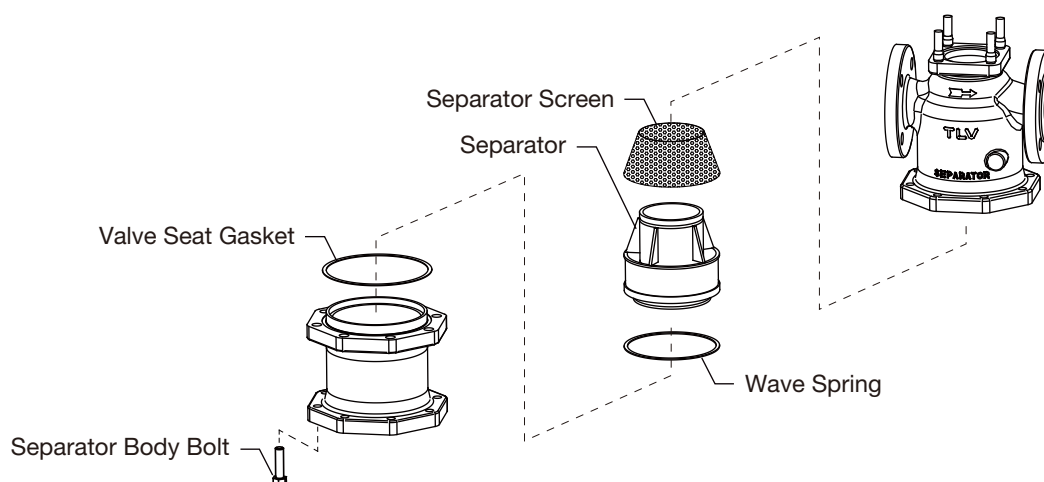

Removing/Reattaching the Trap and its Components


Part Name	During Disassembly	During Reassembly
Bolts for the Trap Cover Cover Float Cover Bolt & Spring Washers	Remove with a socket wrench.	Consult the table of tightening torques and tighten to the proper torque.
Float Cover	Pull up and off.	Replace the float cover.
Float	Remove, being careful not to scratch the polished surface	Insert, being careful not to scratch the polished surface
Trap Valve Seat	Remove with a socket wrench.	Consult the table of tightening torques and tighten to the proper torque.
Trap Valve Seat Gasket	Remove the gasket and clean sealing surfaces.	Replace with a new gasket if warped or damaged.
Trap Cover Gasket	Remove the gasket and clean sealing surfaces.	Replace with a new gasket if warped or damaged.

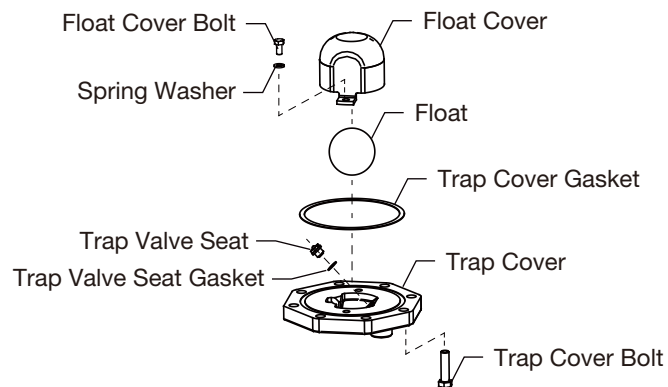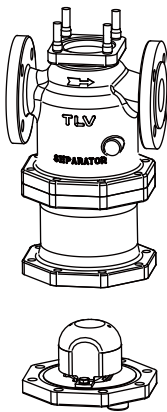


Disassembling/Reassembling the Gland and its Components

In the procedure below, first partially loosen only the guide bushing, and then remove the stem before removing the other parts. (The procedure is most easily performed if the guide bushing is loosened while it is attached to the valve body.)

Part Name	During Disassembly	During Reassembly
Guide Bushing	Remove with a socket wrench.	Consult the table of tightening torques and tighten to the proper torque.
Stuffing Box V-ring Packing	Pull up and off.	Make sure to reassemble the V-ring packing in the proper orientation. Coat the groove with heat-resistance grease (silicon grease). reattach the V-ring packing with their grooves facing downward.
Stuffing Box Washer, Stuffing Box Spring	Pull up and off.	Reinsert

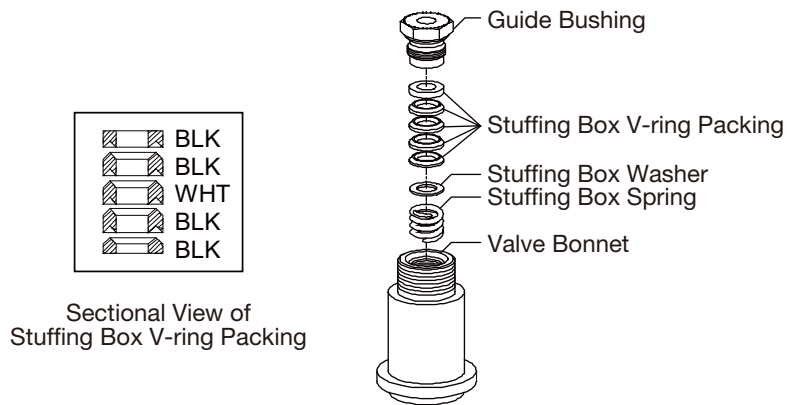

Exploded View

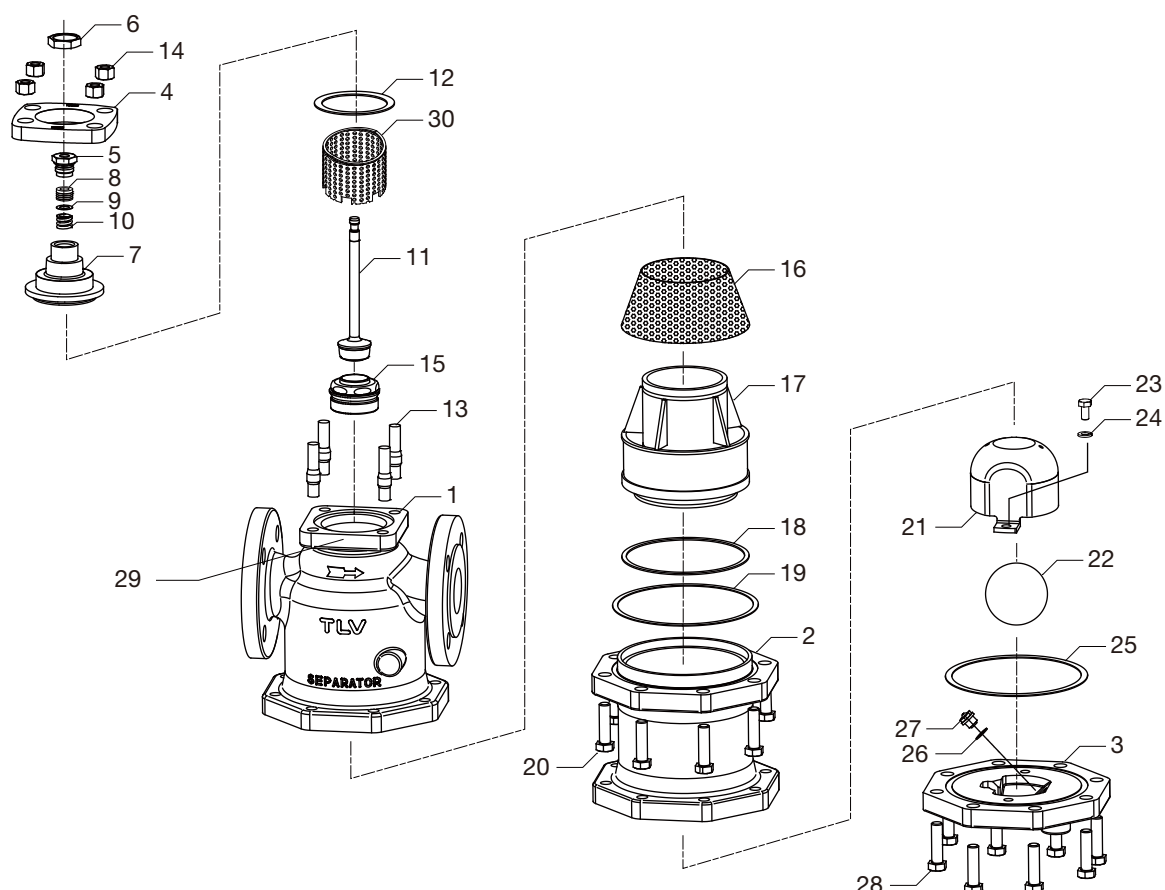

No.	Part Name	No.	Part Name
1	Main Body	16	Separator Screen
2	Separator Body	17	Separator
3	Trap Cover	18	Wave Spring
4	Flange	19	Valve Seat Gasket
5	Guide Bushing	20	Separator Body Bolt
6	Valve Bonnet Nut	21	Float Cover
7	Valve Bonnet	22	Float
8	Stuffing Box V-ring Packing	23	Float Cover Bolt
9	Stuffing Box Washer	24	Spring Washer
10	Stuffing Box Spring	25	Trap Cover Gasket
11	Valve Plug & Stem ⁰¹	26	Trap Valve Seat Gasket
12	Valve Bonnet Gasket	27	Trap Valve Seat
13	Bolt	28	Trap Cover Bolt
14	Nut	29	Nameplate ⁰²
15	Main Valve Seat	30	Silencer ⁰³

⁰¹The shape differs depend on the size and the Cv value

⁰²Front: Model, size, date of manufacture / Back: Spring range, Cv value, etc.

⁰³Standard for Europe, optional for Japan and overseas except Europe

Table of Tightening Torques

Part Name	Size (mm)	Torque (N·m)	Distance Across Flats (mm)
Guide Bushing	15 to 50	50	24
Nuts for Flange	15 to 25	40	16 or 17 ⁰¹
	40, 50	50	18 or 19 ⁰¹
Valve Seat	15 to 25	170	27
	40, 50	500	55
Separator Body Bolt	15 to 40	60	16 or 17 ⁰¹
	50	70	18 or 19 ⁰¹
Float Cover Bolt	15 to 20	7	8
	25 to 40	10	10
	50	20	13 or 14 ⁰¹
Trap Valve Seat	15 to 20	10	11
	25 to 40	15	13 or 14 ⁰¹
	50	40	16 or 17 ⁰¹
Trap Cover Bolt	15 to 40	60	16 or 17 ⁰¹
	50	70	18 or 19 ⁰¹
Valve Bonnet Nut	15 to 50	150	36
Stem Bracket Bolt	15 to 50	5	8

⁰¹Size depends on bolt standard



Note

- If a torque greater than that recommended is applied, the body or components may be damaged.
- Coat all threaded portions with anti-seize.
- If drawings or other special documentation were supplied for the product, any torque given there takes precedence over values shown here.

Troubleshooting



Caution

When disassembling or removing the product, wait until the internal pressure equals atmospheric pressure and the surface of the product has cooled to room temperature.

Disassembling or removing the product when it is hot or under pressure may lead to discharge of fluids, causing burns, other injuries or damage.

When the valve unit fails to operate properly, use the following table to locate the cause and remedy. When the actuator and positioner fail to operate properly, refer to the applicable manual.

Valve Section

Problem	Cause	Diagnosis	Remedy
Valve Leakage	The pressure of the air supply to the actuator or positioner is too high	Check the pressure of the air supply to the actuator and positioner and confirm the nameplate	Adjust the pressure of the air supply for the positioner to match the pressure in the product specifications Refer to the instruction manual for the positioner for zero point adjustment
	The positioner's zero point is miscalibrated	Check the actuator air supply pressure (on the positioner's pressure gauge) when the operation signal is at zero point	If the pressure on the pressure gauge is elevated, adjust the positioner's zero point (refer to the instruction manual for positioner)
	The inlet pressure for the product is too high	Check the inlet pressure for the product	Decrease the inlet pressure to the maximum operating pressure (PMO) or less
	The valve plug and valve seat are off-center	Move the valve plug & stem up and down and see if it catches	Reassemble the valve bonnet section correctly
	There is a problem with the sealing surfaces of the valve plug and valve seat	Check the valve plug and valve seat	Replace with a new valve plug & stem and valve seat

Steam Trap Section

Problem	Cause	Diagnosis	Remedy
Steam is blowing	There is a build-up of dirt on the trap valve seat or on the float	Check the trap valve seat and the float	Clean or replace with a new trap valve seat or float
	The body is installed tilted	Check the installation conditions	Correct the installation
	The float is deformed	Check the float	Replace with a new float (Inspect for water hammer or freezing)
	There is vibration in the piping	Check the piping conditions	Remove the source of the vibration or reinforce the piping supports
No condensate is discharged	The primary pressure exceeds the trap valve seat maximum working pressure	Check the primary pressure	Decrease the inlet pressure to the maximum operating pressure (PMO) or less
	Water is inside the float	Check the float	Replace with a new float (Investigate to see if the flow medium contains corrosive substances)
	Output piping is clogged	Check the outlet piping	Clean or modify the piping
	The trap valve seat is clogged	Check the trap valve seat	Clean or replace with a new trap valve seat

TLV EXPRESS LIMITED WARRANTY

Subject to the limitations set forth below, TLV CO., LTD., a Japanese corporation ("**TLV**"), warrants that products which are sold by it, TLV International Inc. ("**TII**") or one of its group companies excluding TLV Corporation (a corporation of the United States of America), (hereinafter the "**Products**") are designed and manufactured by TLV, conform to the specifications published by TLV for the corresponding part numbers (the "**Specifications**") and are free from defective workmanship and materials. The party from whom the Products were purchased shall be known hereinafter as the "**Seller**". With regard to products or components manufactured by unrelated third parties (the "**Components**"), TLV provides no warranty other than the warranty from the third party manufacturer(s), if any.

Exceptions to Warranty

This warranty does not cover defects or failures caused by:

1. improper shipping, installation, use, handling, etc., by persons other than TLV, TII or TLV group company personnel, or service representatives authorized by TLV; or
2. dirt, scale or rust, etc.; or
3. improper disassembly and reassembly, or inadequate inspection and maintenance by persons other than TLV or TLV group company personnel, or service representatives authorized by TLV; or
4. disasters or forces of nature or Acts of God; or
5. abuse, abnormal use, accidents or any other cause beyond the control of TLV, TII or TLV group companies; or
6. improper storage, maintenance or repair; or
7. operation of the Products not in accordance with instructions issued with the Products or with accepted industry practices; or
8. use for a purpose or in a manner for which the Products were not intended; or
9. use of the Products in a manner inconsistent with the Specifications; or
10. use of the Products with Hazardous Fluids (fluids other than steam, air, water, nitrogen, carbon dioxide and inert gases (helium, neon, argon, krypton, xenon and radon)); or
11. failure to follow the instructions contained in the TLV Instruction Manual for the Product.

Duration of Warranty

This warranty is effective for a period of one (1) year after delivery of Products to the first end user. Notwithstanding the foregoing, asserting a claim under this warranty must be brought within three (3) years after the date of delivery to the initial buyer if not sold initially to the first end user.

ANY IMPLIED WARRANTIES NOT NEGATED HEREBY WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY EXPRESS WARRANTIES NOT NEGATED HEREBY, ARE GIVEN SOLELY TO THE INITIAL BUYER AND ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF SHIPMENT BY THE SELLER.

Exclusive Remedy

THE EXCLUSIVE REMEDY UNDER THIS WARRANTY, UNDER ANY EXPRESS WARRANTY OR UNDER ANY IMPLIED WARRANTIES NOT NEGATED HEREBY (INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE), IS **REPLACEMENT**; PROVIDED: (a) THE CLAIMED DEFECT IS

REPORTED TO THE SELLER IN WRITING WITHIN THE WARRANTY PERIOD, INCLUDING A DETAILED WRITTEN DESCRIPTION OF THE CLAIMED DEFECT AND HOW AND WHEN THE CLAIMED DEFECTIVE PRODUCT WAS USED; AND (b) THE CLAIMED DEFECTIVE PRODUCT AND A COPY OF THE PURCHASE INVOICE IS RETURNED TO THE SELLER, FREIGHT AND TRANSPORTATION COSTS PREPAID, UNDER A RETURN MATERIAL AUTHORIZATION AND TRACKING NUMBER ISSUED BY THE SELLER. ALL LABOR COSTS, SHIPPING COSTS, AND TRANSPORTATION COSTS ASSOCIATED WITH THE RETURN OR REPLACEMENT OF THE CLAIMED DEFECTIVE PRODUCT ARE SOLELY THE RESPONSIBILITY OF BUYER OR THE FIRST END USER. THE SELLER RESERVES THE RIGHT TO INSPECT ON THE FIRST END USER'S SITE ANY PRODUCTS CLAIMED TO BE DEFECTIVE BEFORE ISSUING A RETURN MATERIAL AUTHORIZATION. SHOULD SUCH INSPECTION REVEAL, IN THE SELLER'S REASONABLE DISCRETION, THAT THE CLAIMED DEFECT IS NOT COVERED BY THIS WARRANTY, THE PARTY ASSERTING THIS WARRANTY SHALL PAY THE SELLER FOR THE TIME AND EXPENSES RELATED TO SUCH ON-SITE INSPECTION.

Exclusion of Consequential and Incidental Damages

IT IS SPECIFICALLY ACKNOWLEDGED THAT THIS WARRANTY, ANY OTHER EXPRESS WARRANTY NOT NEGATED HEREBY, AND ANY IMPLIED WARRANTY NOT NEGATED HEREBY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DO NOT COVER, AND NEITHER TLV, TII NOR ITS TLV GROUP COMPANIES WILL IN ANY EVENT BE LIABLE FOR, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOST PROFITS, THE COST OF DISASSEMBLY AND SHIPMENT OF THE DEFECTIVE PRODUCT, INJURY TO OTHER PROPERTY, DAMAGE TO BUYER'S OR THE FIRST END USER'S PRODUCT, DAMAGE TO BUYER'S OR THE FIRST END USER'S PROCESSES, LOSS OF USE, OR OTHER COMMERCIAL LOSSES. WHERE, DUE TO OPERATION OF LAW, CONSEQUENTIAL AND INCIDENTAL DAMAGES UNDER THIS WARRANTY, UNDER ANY OTHER EXPRESS WARRANTY NOT NEGATED HEREBY OR UNDER ANY IMPLIED WARRANTY NOT NEGATED HEREBY (INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) CANNOT BE EXCLUDED, SUCH DAMAGES ARE EXPRESSLY LIMITED IN AMOUNT TO THE PURCHASE PRICE OF THE DEFECTIVE PRODUCT. THIS EXCLUSION OF CONSEQUENTIAL AND INCIDENTAL DAMAGES, AND THE PROVISION OF THIS WARRANTY LIMITING REMEDIES HEREUNDER TO REPLACEMENT, ARE INDEPENDENT PROVISIONS, AND ANY DETERMINATION THAT THE LIMITATION OF REMEDIES FAILS OF ITS ESSENTIAL PURPOSE OR ANY OTHER DETERMINATION THAT EITHER OF THE ABOVE REMEDIES IS UNENFORCEABLE, SHALL NOT BE CONSTRUED TO MAKE THE OTHER PROVISIONS UNENFORCEABLE.

Exclusion of Other Warranties

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED.

Severability

Any provision of this warranty which is invalid, prohibited or unenforceable in any jurisdiction shall, as to such jurisdiction, be ineffective to the extent of such invalidity, prohibition or unenforceability without invalidating the remaining provisions hereof, and any such invalidity, prohibition or unenforceability in any such jurisdiction shall not invalidate or render unenforceable such provision in any other jurisdiction.

Service

For Service or Technical Assistance: Contact your TLV representative or your regional TLV office.

In Europe:

TLV EURO ENGINEERING GmbH

Daimler-Benz-Straße 16-18, 74915 Waibstadt, **Germany**

Tel: [49]-(0)7263-9150-0

TLV EURO ENGINEERING UK LTD.

Units 7 & 8, Furlong Business Park, Bishops Cleeve,
Gloucestershire GL52 8TW, **U.K.**

Tel: [44]-(0)1242-227223

TLV EURO ENGINEERING FRANCE SARL

Parc d'Ariane 2, bât. C, 290 rue Ferdinand Perrier, 69800 Saint
Priest, **France**

Tel: [33]-(0)4-72482222

Fax: [33]-(0)4-72482220

In North America:

TLV CORPORATION

13901 South Lakes Drive, Charlotte, NC 28273-6790, **U.S.A.**

Tel: [1]-704-597-9070

Fax: [1]-704-583-1610

TLV ENGINEERING S. A. DE C.V.

Av. Jesús del Monte 39-B-1001, Col. Hda. de las Palmas,
Huixquilucan, Edo. de México, 52763, **Mexico**

Tel: [52]-55-5359-7949

Fax: [52]-55-5359-7585

In Oceania:

TLV PTY LIMITED

Unit 8, 137-145 Rooks Road, Nunawading, Victoria 3131,
Australia

Tel: [61]-(0)3-9873 5610

Fax: [61]-(0)3-9873 5010

In East Asia:

TLV PTE LTD

36 Kaki Bukit Place, #02-01/02, **Singapore** 416214

Tel: [65]-6747 4600

Fax: [65]-6742 0345

TLV SHANGHAI CO., LTD.

5/F, Building 7, No.103 Caobao Road, Xuhui District, Shanghai,
China 200233

Tel: [86]-(0)21-6482-8622

Fax: [86]-(0)21-6482-8623

TLV ENGINEERING SDN. BHD.

No.16, Jalan MJ14, Taman Industri Meranti Jaya, 47120
Puchong, Selangor, **Malaysia**

Tel: [60]-3-8052-2928

Fax: [60]-3-8051-0899

TLV PRIVATE LIMITED

252/94 (K-L) 17th Floor, Muang Thai-Phatra Complex Tower B,
Rachadaphisek Road, Huaykwang, Bangkok 10310, **Thailand**

Tel: [66]-2-693-3799

Fax: [66]-2-693-3979

TLV INC.

#302-1 Bundang Technopark B, 723 Pangyo-ro, Bundang,
Seongnam, Gyeonggi, 13511, **Korea**

Tel: [82]-(0)31-726-2105

Fax: [82]-(0)31-726-2195

In the Middle East:

TLV ENGINEERING FZCO

Building 9W, B163, PO Box 371684, Dubai Airport Free Zone,
Dubai, **UAE**

Email: sales-me@tlv.co.jp

In Other Countries:

TLV INTERNATIONAL, INC.

881 Nagasuna, Noguchi, Kakogawa, Hyogo 675-8511, **Japan**

Tel: [81]-(0)79-427-1818

Fax: [81]-(0)79-425-1167

Manufacturer:

TLV CO., LTD.

881 Nagasuna, Noguchi, Kakogawa, Hyogo 675-8511, **Japan**

Tel: [81]-(0)79-427-1800

Fax: [81]-(0)79-422-2277


Options



Caution
Install properly and DO NOT use this product outside the recommended operating pressure, temperature and other specification ranges. Improper use may result in such hazards as damage to the product or malfunctions that may lead to serious accidents. Local regulations may restrict the use of this product to below the conditions quoted.


Take measures to prevent people from coming into direct contact with product outlets.
Failure to do so may result in burns or other injury from the discharge of fluids.

The options shown below are available for this product on request. Please compare with the product you received.

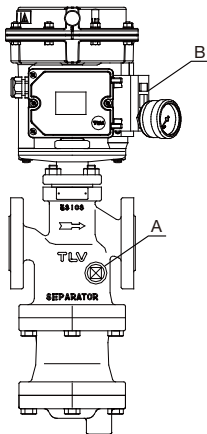


Options for area A: Body (standard: Without plug)

Without Plug

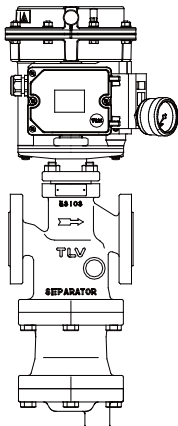

With Plug

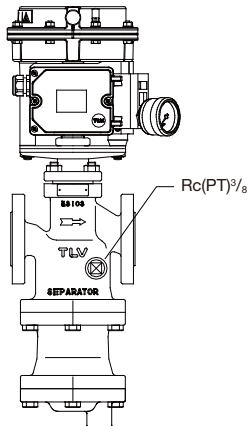

Torque N·m	Distance Across Flats mm
30	12



Note
Wrap sealing
tape 3 to 3.5
times around the
threaded portions.


Applications for use

Where there are large amounts of dirt or scale, or for applications such as heating in which the equipment is shut down for long periods of time, be sure to install a blow/ purge valve.

1. Remove the plug (optional) from the main body and install the blow/purge valve.
2. Open the blow/purge valve and blow any residual dirt and scale off of the screen.
3. Periodically activate the blow/purge valve to keep the system free of dirt and scale.


Options for area B: Actuator

With Filter Regulator
(Manual condensate discharge)

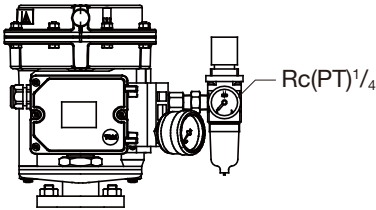


Integrated filter: 5 μm

With Filter Regulator
(Automatic condensate discharge)

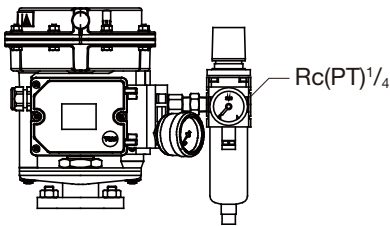


Integrated filter: 5 μm

With Mist Separator + Filter Regulator
(Manual condensate discharge)

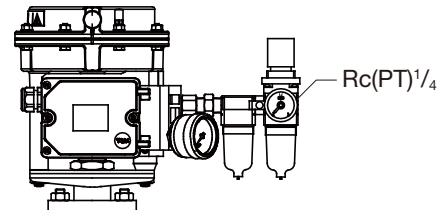

Integrated filter: 0.3 μm + 5 μm

With Mist Separator + Filter Regulator
(Automatic condensate discharge)

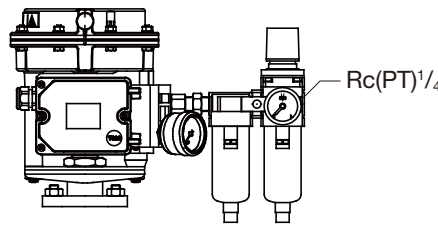

Integrated filter: 0.3 μm + 5 μm